

CONTROL BOXES

CONTROL BOX NO. MODEL	37283 RB106-2	37290 RB106-2	37331 RB340	37342 RB340	37344 RB340	37354 RB340
Cover	391600	391600	54381342	54381342	54381342	54381342
Clip, nut, screw, or rivet	—	—	54150701	54150701	54150701	54150701
Resistance, points	54380858	54380858	54385761*	54385761*	54385761*	54385761*
Resistance, swamp	—	—	54385761*	54385761*	54385761*	54385761*
Contact set, cut out	335767	335767	—	—	—	—
Contact set, current regulator	226339	226339	—	—	—	—
Grommet & Ferrule, mounting	—	—	54380926	54380926	54380926	54380926

* Points & Swamp Resistance Kit.

CONTROL BOX NO. MODEL	37378 RB340	37419 RB340	37517 RB340	37543 RB340	37569 RB340	37576 RB340
Cover	54381342	54381342	54381342	54381342	54381342	54381342
Clip, nut, screw or rivet	—	54150701	54150701	—	54150701	—
Points & swamp resistance kit	54385761*	54385761*	54385761*	54385761*	54385761*	54385761*
Resistance, swamp	54385761*	54385761*	54385761*	54385761*	54385761*	54385761*
Grommet & Ferrule, mounting	54380926	54380926	54380926	54380926	54380926	54380926
Gasket, cover sealing	—	—	54385767	54385767	—	—
Contact set, cut out	—	—	335767	—	—	—

* Points & Swamp Resistance Kit.

MODEL 23D4 & 25D4 (Cont'd.)

DISTRIBUTOR NO. MODEL	40942 25D4	40944 25D4	40953 23D4	40955 25D4	40983 25D4	40984 25D4
Plate, clamping	421191	420151	54410930	421191	54410930	54410930
Screw & nut, clamping	—	415087	415087	412202	415087	415087
Cover, moulded	54414513	54414513	54412472	54412472	54417214	54417214
Brush & spring	418856	418856	418856	418856	418856	418856
Nut, moulded	410600	410600	—	—	—	—
Rotor arm	400051	400051	54422688	400051	400051	400051
Contact set	423153	423153	54413568	423153	423153	423153
Bush, contact breaker lever, insulating	—	419950	419950	419950	419950	419950
Contact set (one piece)	later —	54419946	54419946	54419946	54419946	54419946
Condenser	423871	423871	423871	423871	423871	423871
Plate, contact breaker base	422318	422318	54412436	422318	422318	422318
Plate, contact breaker base (One piece contact set)	later —	54419792	54422372	54419792	54419792	54419792
Plate, contact breaker bearing	54412154	54412154	—	54412154	54412154	54412154
Terminal, bush & lead	54413549	54413549	54413549	54413549	54413549	54413549
Cam	424423	54419822	424422	54421816	54419030	54419030
Spring set, auto advance	54414990	54411631	54416337	54416468	—	54415348
Weight	54413073	54413073	54413073	54413073	54413922	54413922
Shaft & action plate	54410290	54410290	54410290	54416610	54410290	54410290
Vacuum unit	54414923	54411598	—	—	54415089	54415088
Dog or gear, driving	420620	420620	54410365	420620	54410365	54410365
Ring, 'O' oil seal	—	—	188639	188639	—	—
Tune-up kit	—	60041004	60041004	60041004	60041004	60041004

DISTRIBUTOR NO. MODEL	41026 25D4	41036 25D4	41042 25D4	41043 25D4	41077 25D4	41085 25D4
Plate, clamping	421191	421191	420151	420151	420151	421191
Screw & nut, clamping	412202	415087	415087	415087	415087	415087
Cover, moulded	54417214	54414513	54417214	54417214	54417214	54414513
Brush & spring	418856	418856	418856	418856	418856	418856
Nut, moulded	—	410600	—	—	—	410600
Rotor arm	400051	400051	400051	400051	400051	400051
Contact set	423153	423153	423153	423153	423153	423153
Bush, contact breaker lever, insulating	419950	419950	419950	419950	419950	419950
Contact set (one piece)	later 54419946	—	54419946	54419946	54419946	—
Condenser	423871	423871	423871	423871	423871	423871
Plate, contact breaker base	422318	422318	422318	422318	422318	422318
Plate, contact breaker base (One piece contact set)	later 54419792	—	54419792	54419792	54419792	—
Plate, contact breaker bearing	54412154	54412154	54412154	54412154	54412154	54412154
Terminal, bush & lead	54417569	54413549	54413549	54413549	54413549	54413549
Cam	491070	54419030	491070	491070	54418549	54419674
Spring set, auto advance	54412934	54417285	—	54411543	54413105	54417956
Weight	54413073	54413922	54413073	54413073	54413073	54413073
Shaft & action plate	54416610	54410290	54410290	54410290	54410290	54410290
Vacuum unit	54414868	54415212	—	54412170	54414973	54420777
Dog or gear, driving	420620	420620	420620	420620	420620	420620
Ring, 'O' oil seal	188639	188639	—	—	—	188639
Tune-up kit	60041004	—	60041004	60041004	60041004	—

MODEL 23D4 & 25D4 (Cont'd.)

DISTRIBUTOR NO. MODEL	41225 25D4	41229 25D4	41231 25D4	41237 25D4	41240 25D4	41249 25D4
Plate, clamping	54410930	421191	54410620	—	420151	421191
Screw & nut, clamping	415087	412202	415087	—	415087	412202
Cover, moulded	54412472	54412472	54417214	54417214	54414513	54412472
Brush & spring	418856	418856	418856	418856	418856	418856
Nut, moulding	—	—	—	—	410600	—
Rotor arm	54422688	400051	400051	400051	400051	400051
Contact set	423153	423153	423153	423153	423153	423153
Bush, contact breaker lever, insulating	419950	419950	419950	419950	419950	419950
Contact set (one piece)	later 54419946	—	54419946	54419946	—	54419946
Condenser	423871	423871	423871	423871	423871	423871
Plate, contact breaker base	422318	422318	422318	422318	422318	422318
Plate, contact breaker base (One piece contact set)	later 54419792	—	54419792	54419792	—	54419792
Plate, contact breaker bearing	54412154	54412154	54412154	54412154	54412154	54412154
Terminal, bush & lead	54413549	54413549	54413549	54413549	54413549	54413549
Cam	54419674	54418549	54421816	54419822	—	54421816
Spring set, auto advance	54413970	54419852	54414000	54420630	54420633	54412934
Weight	54413922	54413073	54413073	54413922	54413922	54413073
Shaft & action plate	54410290	54416610	54410290	54410290	54410290	54416610
Vacuum unit	54415328	54418274	54411979	54412170	54423308	54414868
Vacuum unit (retard)	—	—	—	54420631	—	—
Dog or gear, driving	54410365	420620	420620	420620	420620	420620
Ring, 'O' oil seal	188639	188639	—	—	—	188639
Tune-up kit	60041004	—	60041004	60041004	—	60041004

DISTRIBUTOR NO. MODEL	41264 25D4	41267 25D4	41271 25D4	41288 25D4	41290 25D4	41291 25D4
Plate, clamping	421191	420151	421191	421191	421191	420151
Screw & nut, clamping	412202	415087	412202	412202	412202	415087
Cover, moulded	54417214	54417214	54412472	54417214	54417214	54417214
Brush & spring	418856	418856	418856	418856	418856	418856
Nut, moulded	—	—	—	—	—	—
Rotor arm	400051	400051	400051	400051	400051	400051
Contact set	423153	423153	423153	423153	423153	423153
Bush, contact breaker lever, insulating	419950	419950	419950	419950	419950	419950
Contact set (one piece)	later 54419946	54419946	54419946	54419946	54419946	54419946
Condenser	423871	423871	423871	423871	423871	423871
Plate, contact breaker base	422318	422318	422318	422318	422318	422318
Plate, contact breaker base (One piece contact set)	later 54419792	54419792	54419792	54419792	54419792	54419792
Plate, contact breaker bearing	54412154	54412154	54412154	54412154	54412154	54412154
Terminal, bush & lead	54417569	54413549	54413549	54413549	54413549	54413549
Cam	54419030	491069	54418549	54419674	424422	491070
Spring set, auto advance	54420559	—	54419852	54415428	54415726	—
Weight	54413922	54413922	54413073	54413073	54413073	54413922
Shaft & action plate	54416610	54410290	54416610	54416610	54416610	54410290
Vacuum unit	54415625	54415212	54418274	54411985	54412170	54414923
Dog or gear, driving	420620	420620	420620	420620	420620	420620
Ring, 'O' oil seal	188639	—	188639	—	—	—
Tune-up kit	60041004	60041004	60041004	60041004	60041004	60041004

GENERATOR NO. MODEL	22700 C40-1	22704 C40	22713 C40L	22715 C40-1	22716 C40L	22742 C40
Bracket, drive end	54215165	54215165	54215165	54215165	54215165	54217762
Bearing retention kit	54200131	54200131	54200131	54200131	54200131	54200131
Bearing, drive end	54160090	54160090	54160090	54160090	54160090	54160090
Armature	54217499	54217499	54217874	54217499	54217874	54217499
Field coil kit	54219374	54219374	54219941	54219374	54219941	54219374
Terminal kit	54216878	54216878	54216878	54216878	54216878	54216878
Bracket, commutator end	54211125	54211125	54211125	54211125	54212628	54215121
Oiler	54211097	54211097	54211097	54211097	54211097	54211097
Bushing, bearing	227818	227818	227818	227818	227818	227818
Springs set, brush tension	227542	227542	227542	227542	227542	227542
Brushes set	227541	227541	227541	227541	227541	227541
Bolts, through fixing	228336	228336	256009	228336	256009	228336
Sundry parts kit	54219944	54219944	54219944	54219944	54219944	54219944

GENERATOR NO. MODEL	22756 C40T	22763 C40L	22775 C40	22800 C48	22804 C48	22900 C42
Bracket, drive end	54216225	54215165	54217762	233135	—	54216542
bearing retention kit	54200132	54200131	54200131	233016	233016	54200131
Bearing, drive end	54160139	54160090	54160090	189275	189314	189237
Armature	54218417	54217874	54217499	54210318	54211541	54217162
Field coil kit	54219374	54219941	54219374	54210853	54210853	54210950
Terminal kit	54216878	54216878	54216878	—	60600104	54216878
Terminal, field	—	—	—	233062	—	—
Elbow (cable cover)	—	—	—	54940450	—	—
Bracket, commutator end	54216363	54212628	54215121	54210375	—	54213565
Oiler	—	54211097	54211097	—	—	54211097
Bushing, bearing	—	227818	227818	189212	189237	54210144
Bearing, ball	54160219	—	—	—	—	—
Bearing, retention kit	54200160	—	—	—	—	—
Springs set, brush tension	54219375	227542	227542	233358	54212767	227542
Brushes set	54216361	227541	227541	54213478	54213478	54213141
Bolts, through fixing	228336	256009	228336	—	—	54210147
Tacho gear kit	54217725	—	—	—	—	—
Sundry parts kit	54219944	54219944	54219944	—	—	54219944

GENERATOR NO. MODEL	22902 C42	22906 C42	22907 C42	22908 C42	22910 C42
Bracket, Drive end	54213143	54213630	54216448	54213630	54216542
Bearing retention kit	—	—	—	—	54200131
Bearing, drive end	189237	54160090	189237	54160090	54160090
Armature	54217162	54212590	—	54217164	54217162
Field coil kit	54210950	54212574	54212574	54212574	54210950
Terminal kit	54216878	60600104	60600104	60600104	54216878
Bracket, commutator end	—	54213631	54213631	54213631	54213139
Oiler	54211097	—	—	—	54211097
Bushing, bearing	54210144	—	—	189237	54211044
Springs set, brush tension	227542	227542	227542	227542	227542
Brushes set	54213141	54213141	54213141	54213141	54213141
Bolts, through fixing	54210147	—	54210147	54210147	54210147
Sundry parts kit	54219944	54213625	54213625	54213625	54219944

MODEL M35G-1 SB DRIVE

STARTER NO. MODEL	25079 M35G-1	25083 M35G-1	25085 M35G-1	25122 M35G-1	25142 M35G-1
Cover band	250322	250322	250322	250322	—
Screw, fixing cover	54257851	54257851	54257851	126589	54257851
Nut, fixing screw	169160	169160	169160	169160	169160
Bolt, through fixing	228335	228335	228335	228335	228335
Brushes set	251108	251108	251108	251108	251108
Bracket, commutator end	54246004	54246004	54246004	54246004	54246004
Bushing, bearing	251477	251477	251477	251477	251477
Spring set, brush tension	251942	251942	251942	251942	251942
Cup, shaft	54256889	54256889	54256889	54256889	54256889
Washer, buffer	291970	291970	291970	291970	291970
Spring, main	250404	250404	250404	250404	250404
Ring, jump	54251921	54251921	54251921	54251921	54251921
Pinion & barrel	54252212	54252212	54252212	54240294	54240294
Sleeve, screwed	250696	250696	250696	250696	250696
Bracket, drive end	54253143	54257554	54253143	54257554	54241881
Bushing, bearing	253316	253316	253316	253316	253316
Armature	54254042	54254042	54254042	54254042	54254042
Washer, thrust, drive end	158550	158550	158550	158550	158550
Field coils	60250098	60250098	60250098	251089	60250098
Terminal field	54252850	54252850	54252850	54252850	54252850
Bush, insulating	54251942	54251942	54251942	54251942	54251942
Collar, spacing	54251943	54251943	54251943	54251943	54251943
Sundry parts set	256762	256762	256762	256762	256762

MODEL M35J SB DRIVE

STARTER NO. MODEL	25147 M35J	25148 M35J	25149 M35J
Brushes set	60600056	60600056	60600056
Bracket kit, commutator end	54243579	54247402	54243579
Sealing kit	—	60600090	—
Comprising sealing cap & gasket			
Bush kit	54244773	54244773	54244773
Jump ring, drive	54251921	54251921	54251921
Shaft cup, drive	54256889	54256889	54256889
Buffer washer, drive	291970	291970	291970
Main spring	250404	250404	250404
Pinion & barrel	54252212	54240294	54252212
Screwed sleeve, drive	250696	250696	250696
Armature	54252038	54252038	54252038
Field coil kit	54245219	54245219	54245219
Bracket kit, drive end	54241172	54242326	54242336
Sundry parts kit	54244771	54244771	54244771